

FIG.1

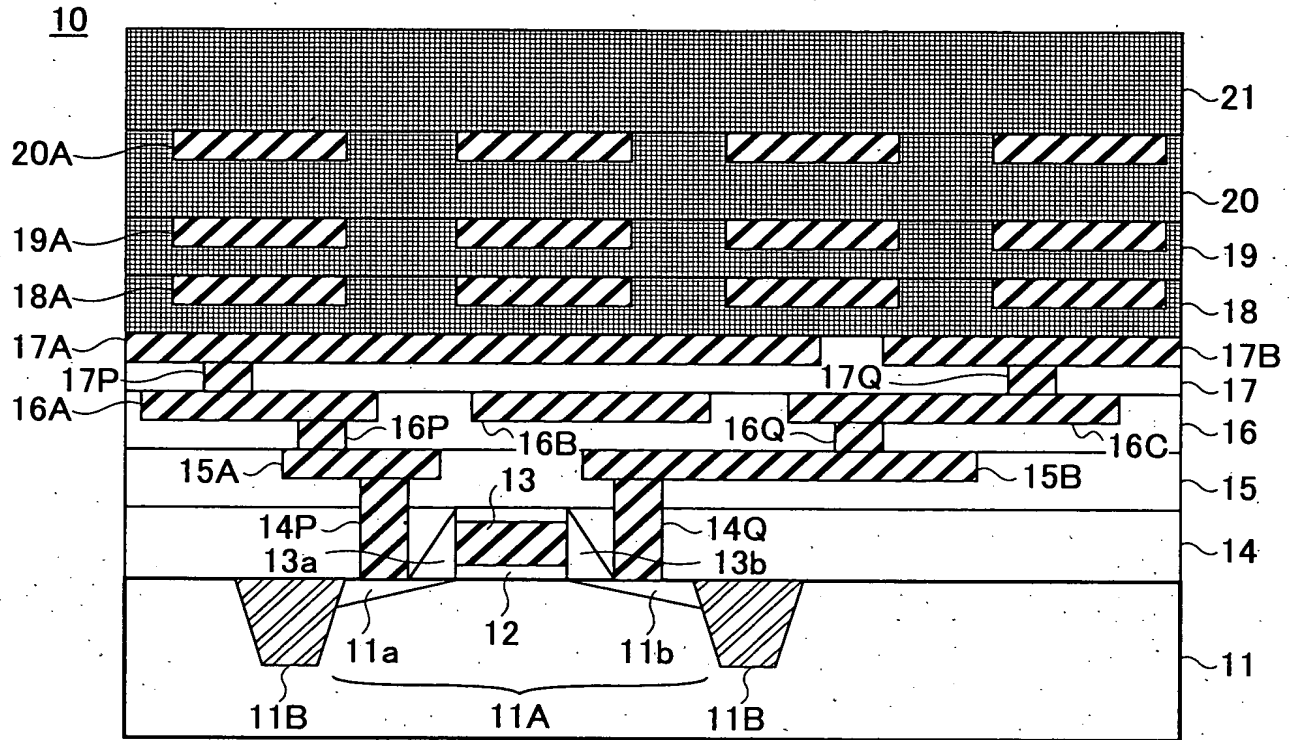


FIG.2

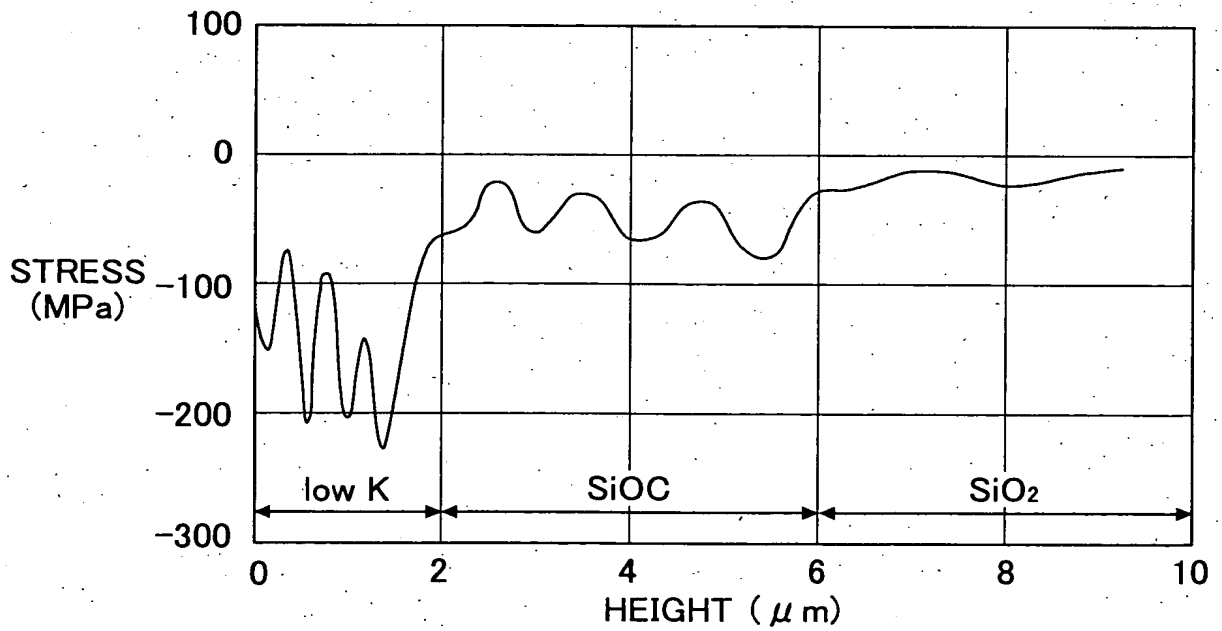


FIG.3

PRESSURE

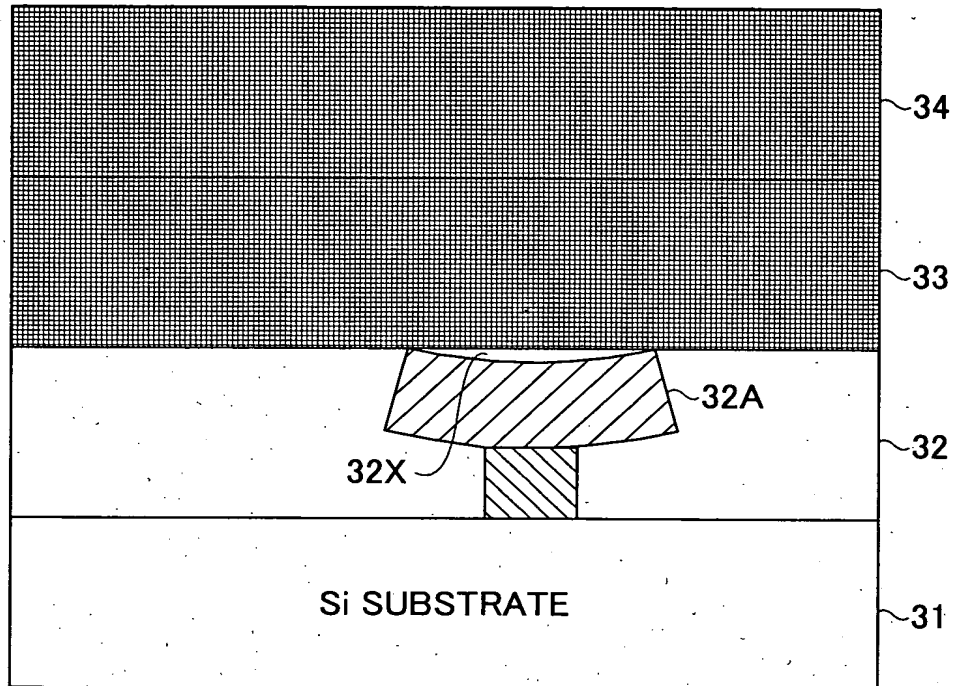


FIG. 4

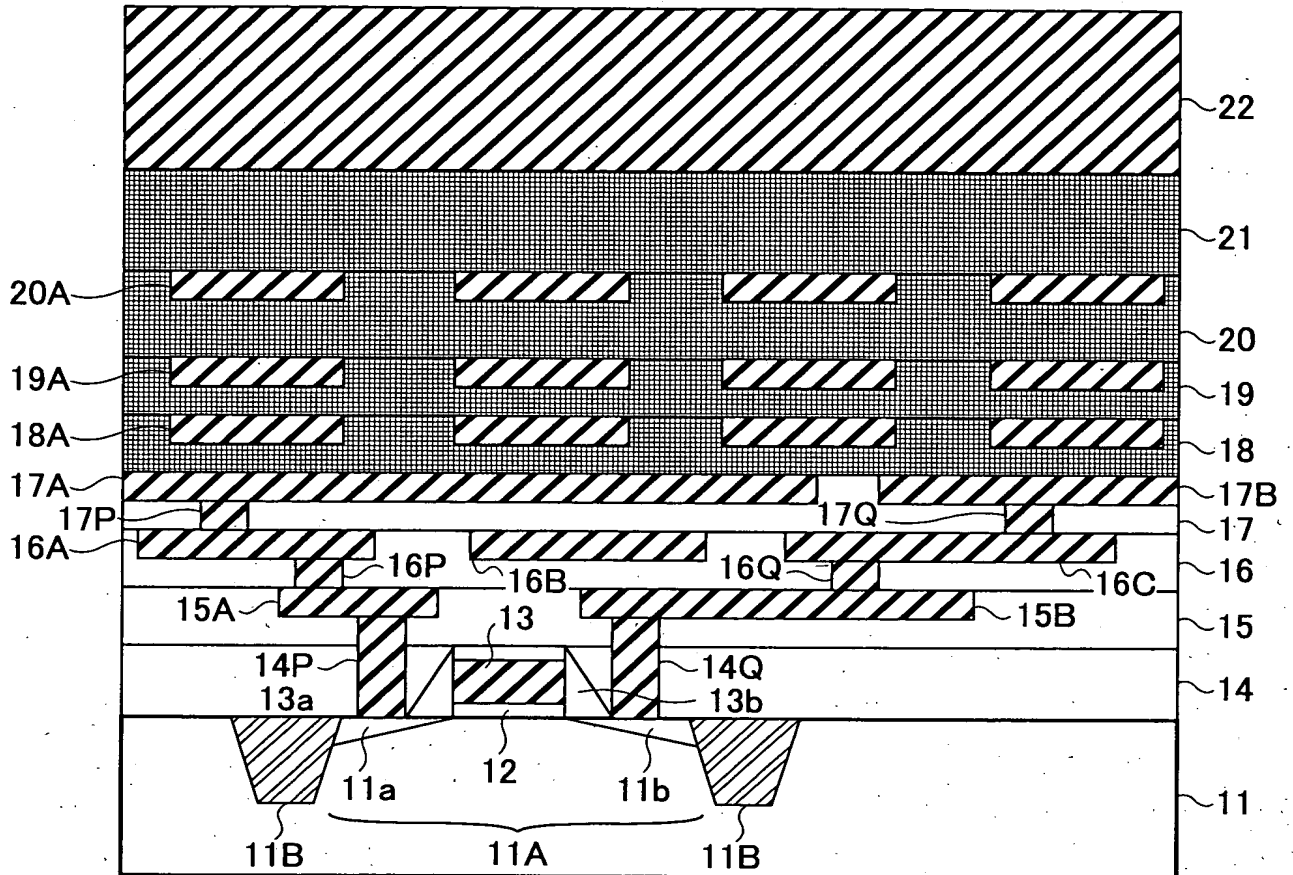


FIG.5

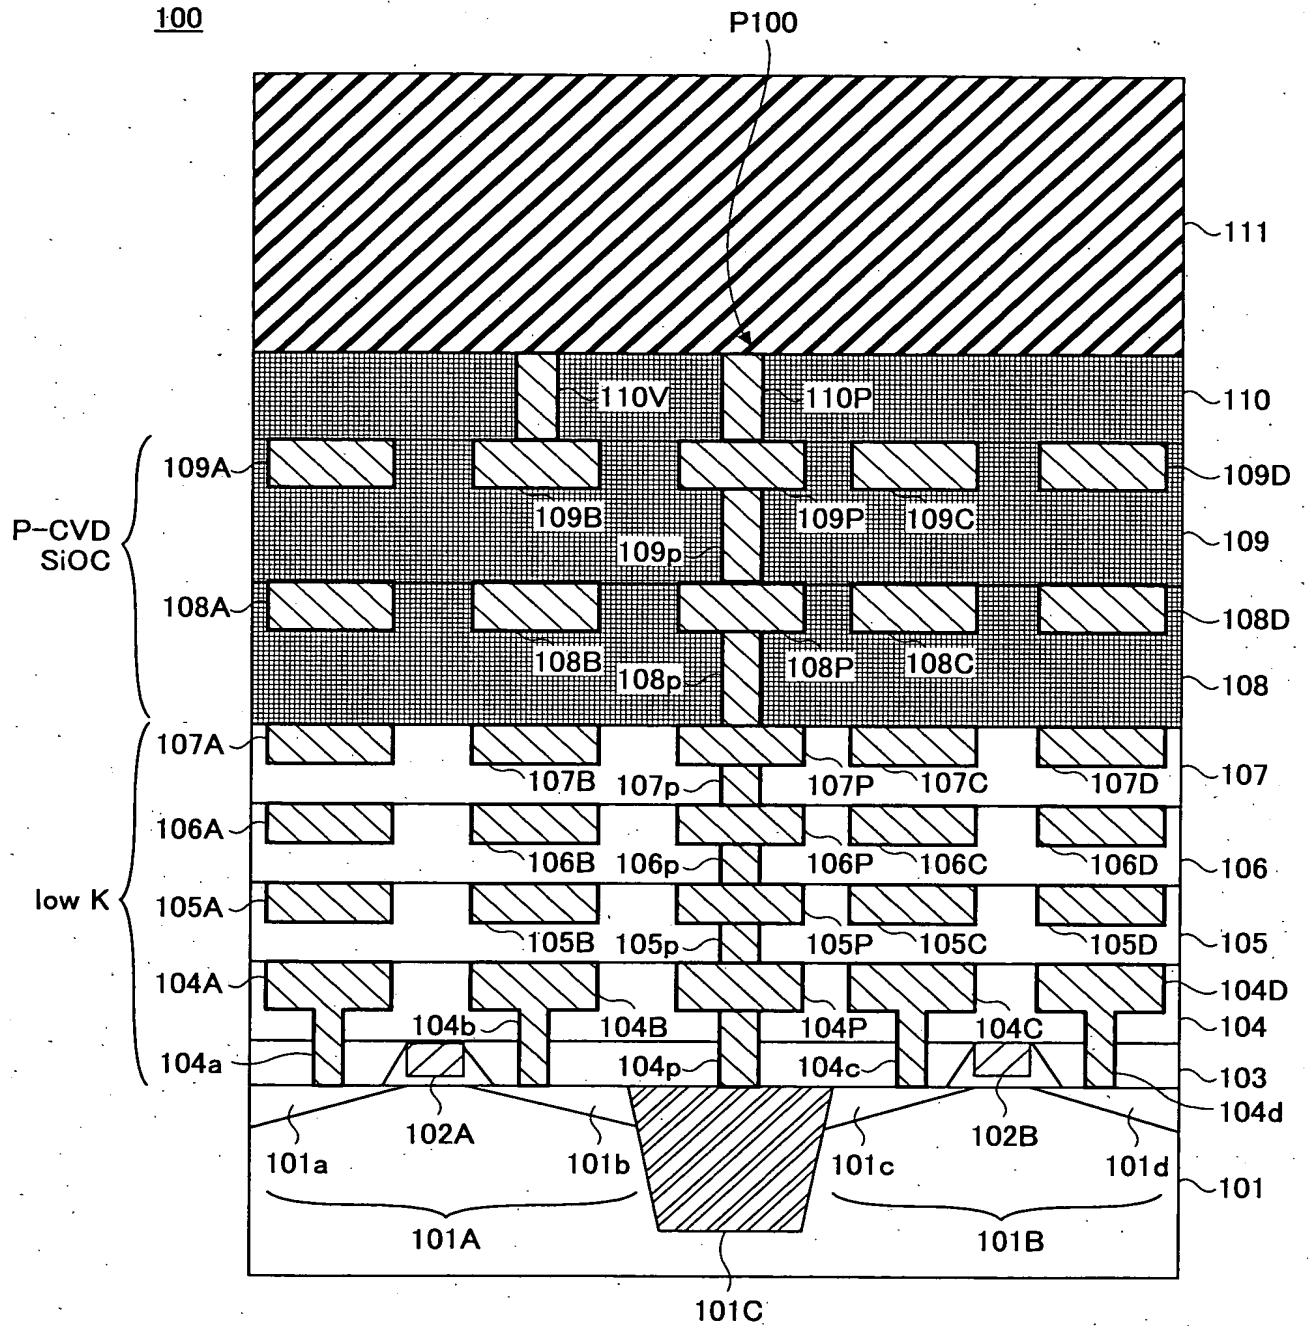
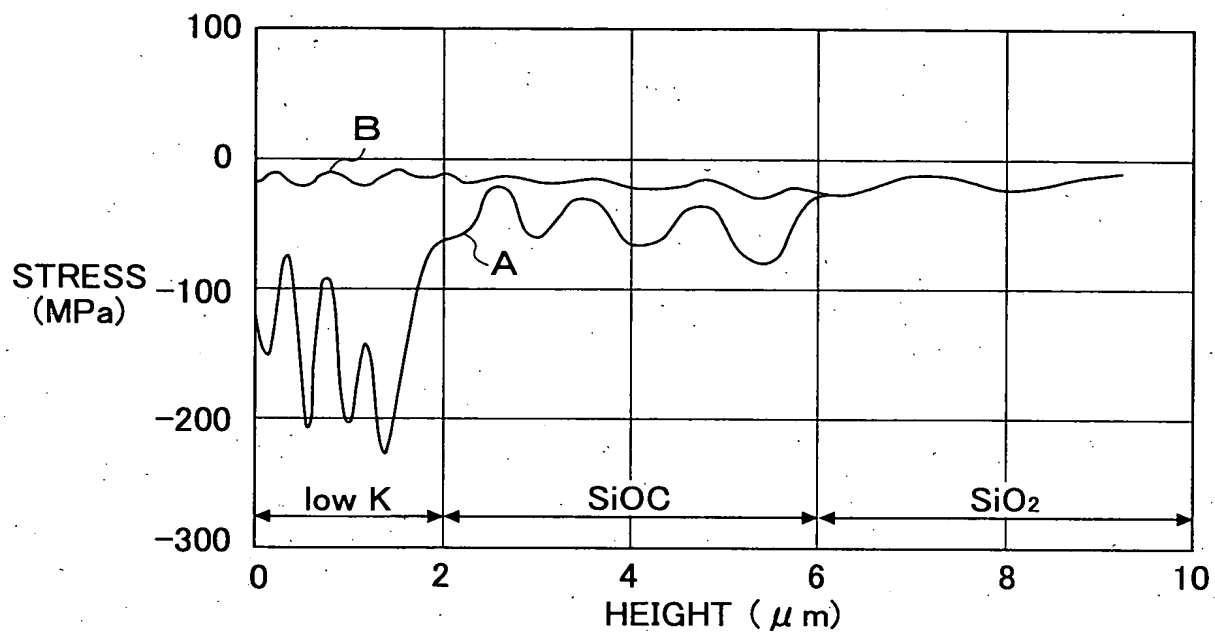


FIG.6



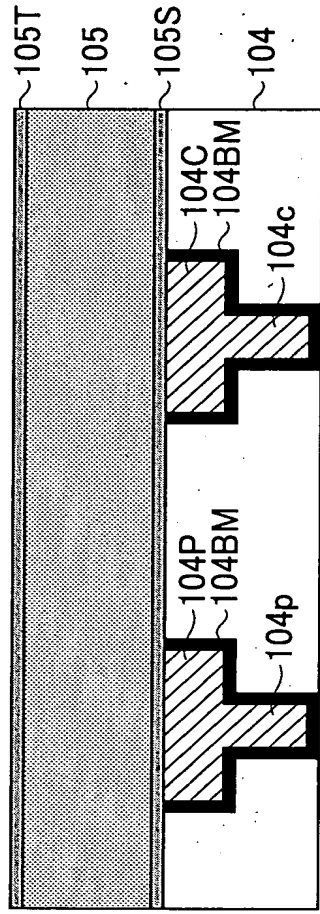


FIG. 7A

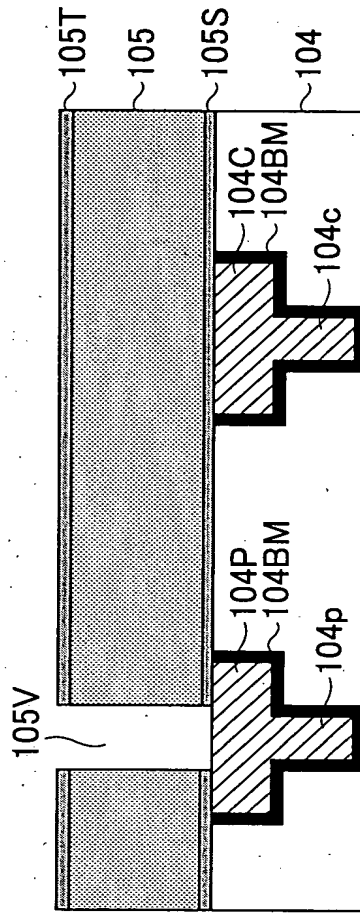


FIG. 7B

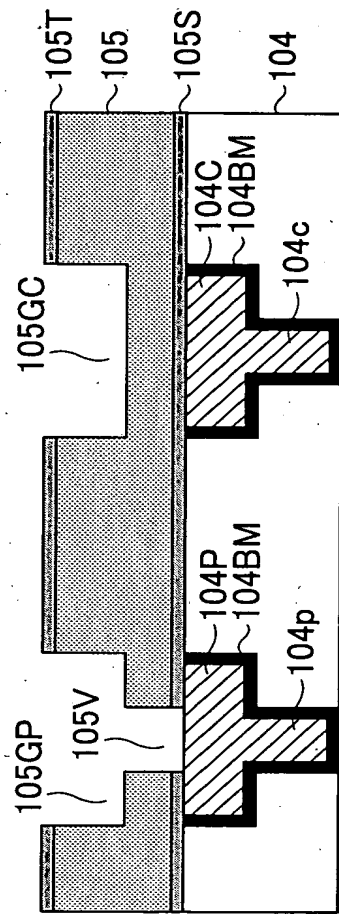


FIG. 7C

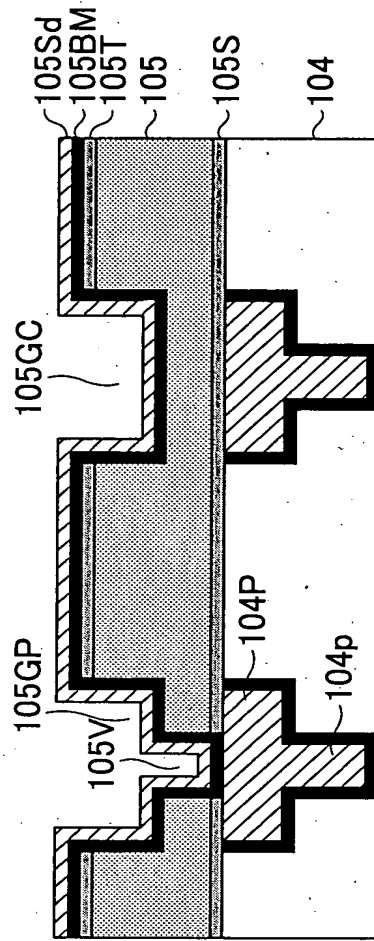


FIG. 7D

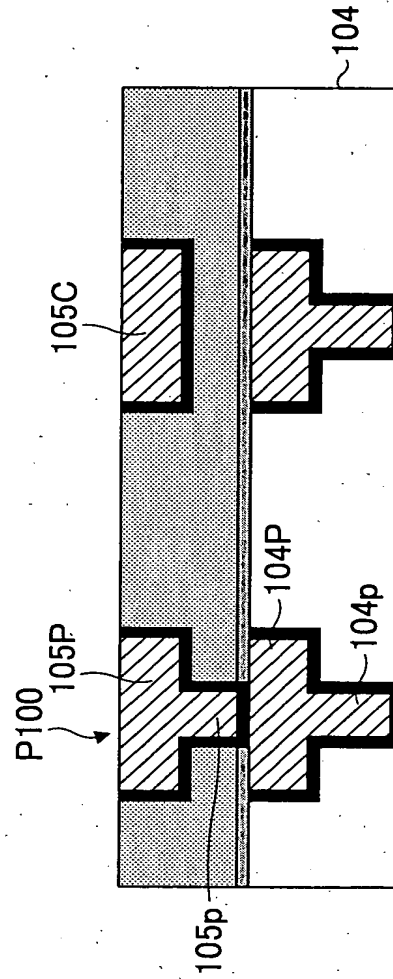


FIG. 7E

FIG. 8

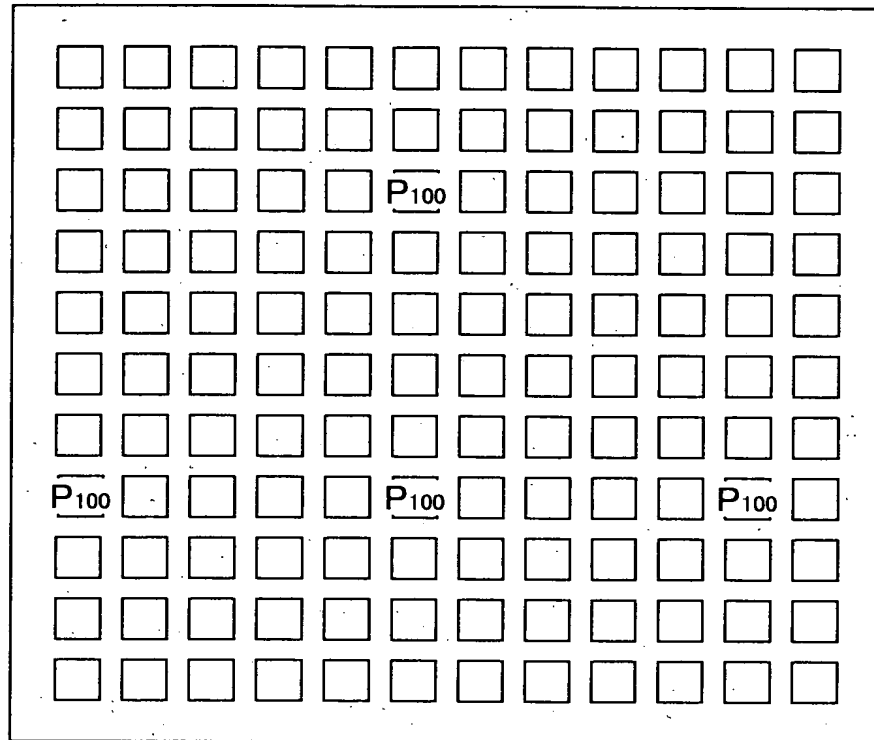




FIG.9

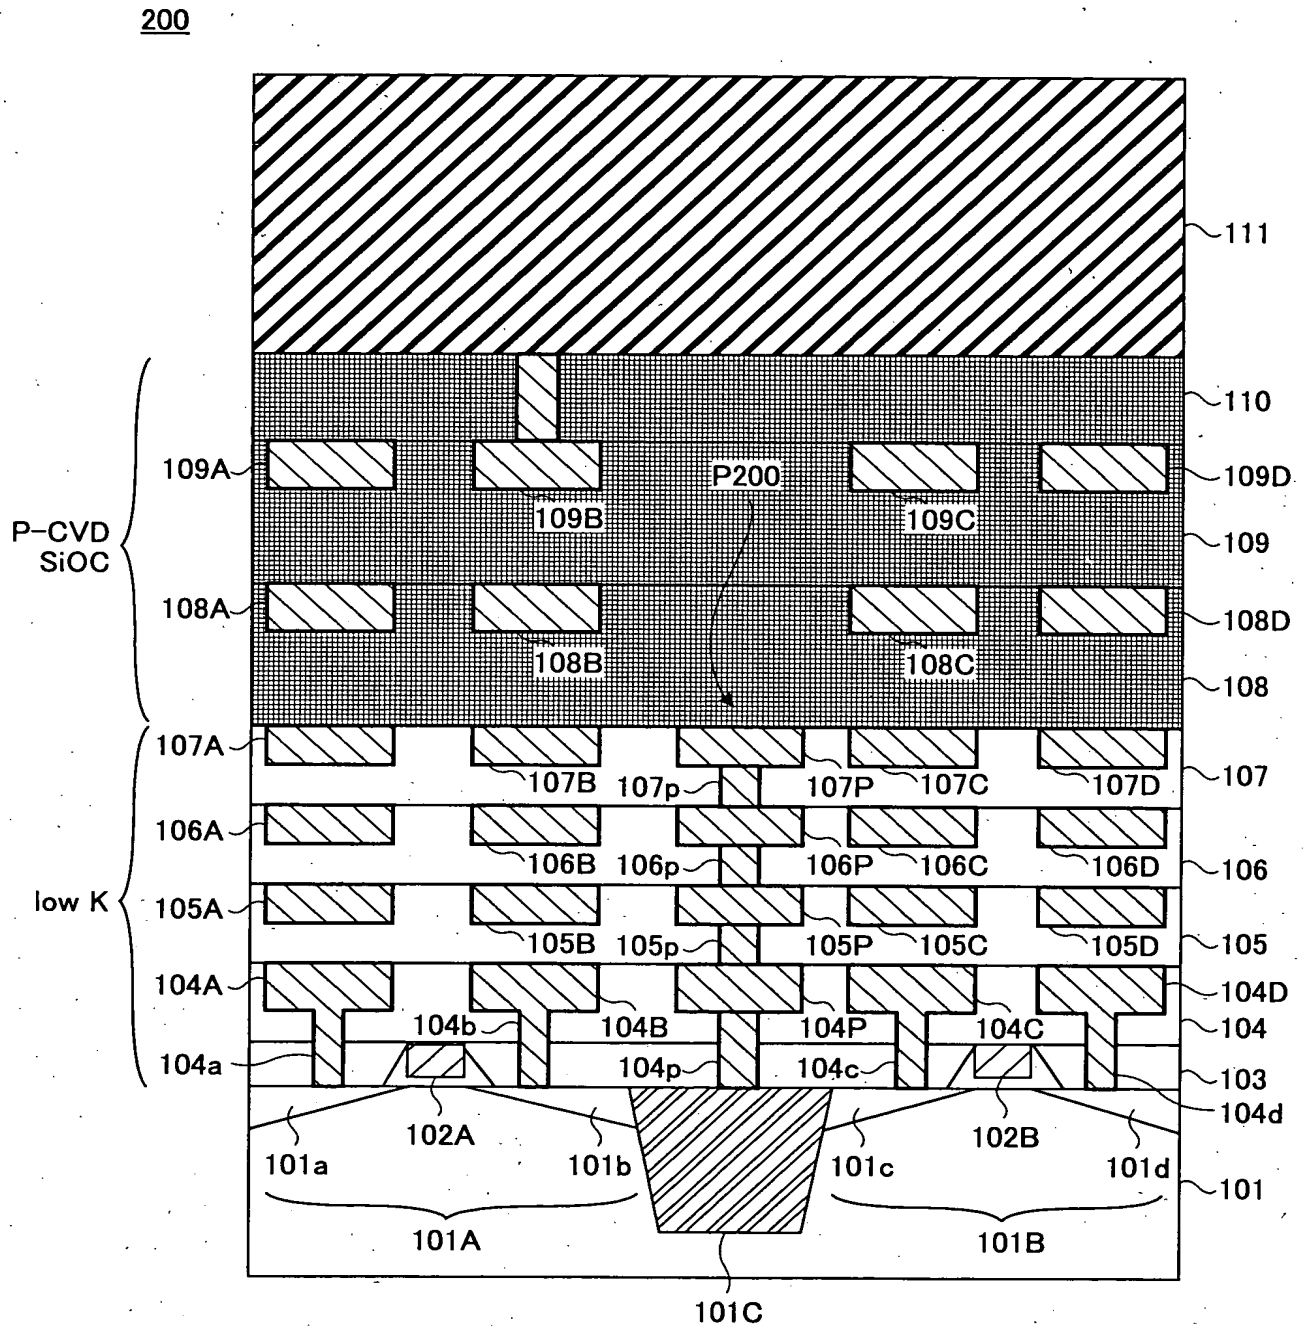


FIG.10

300

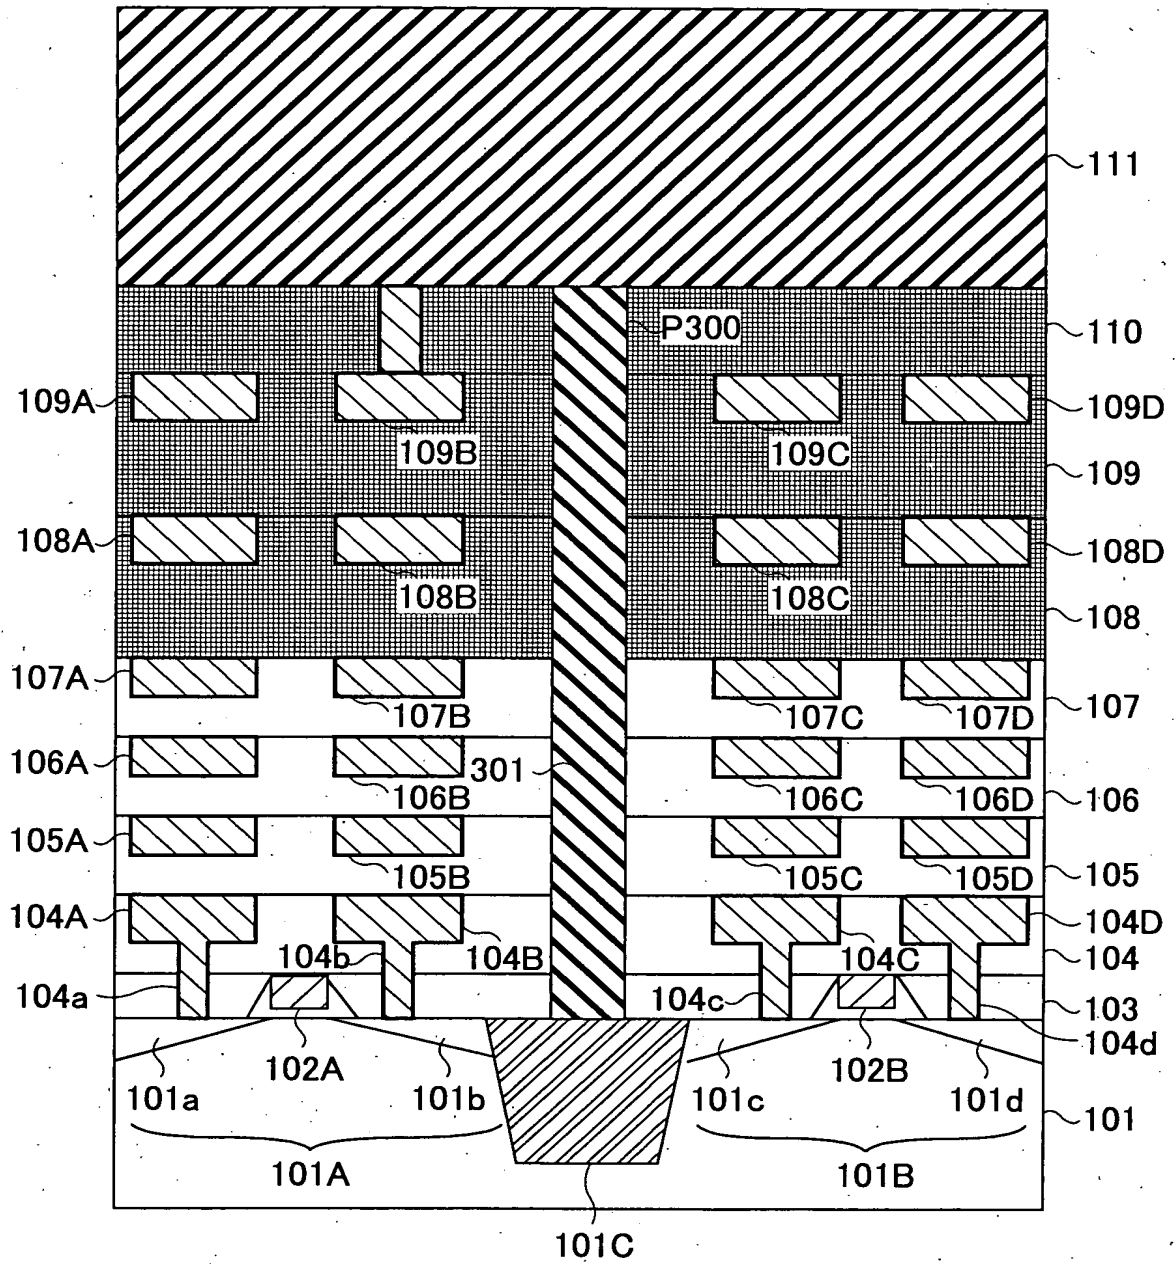


FIG. 11

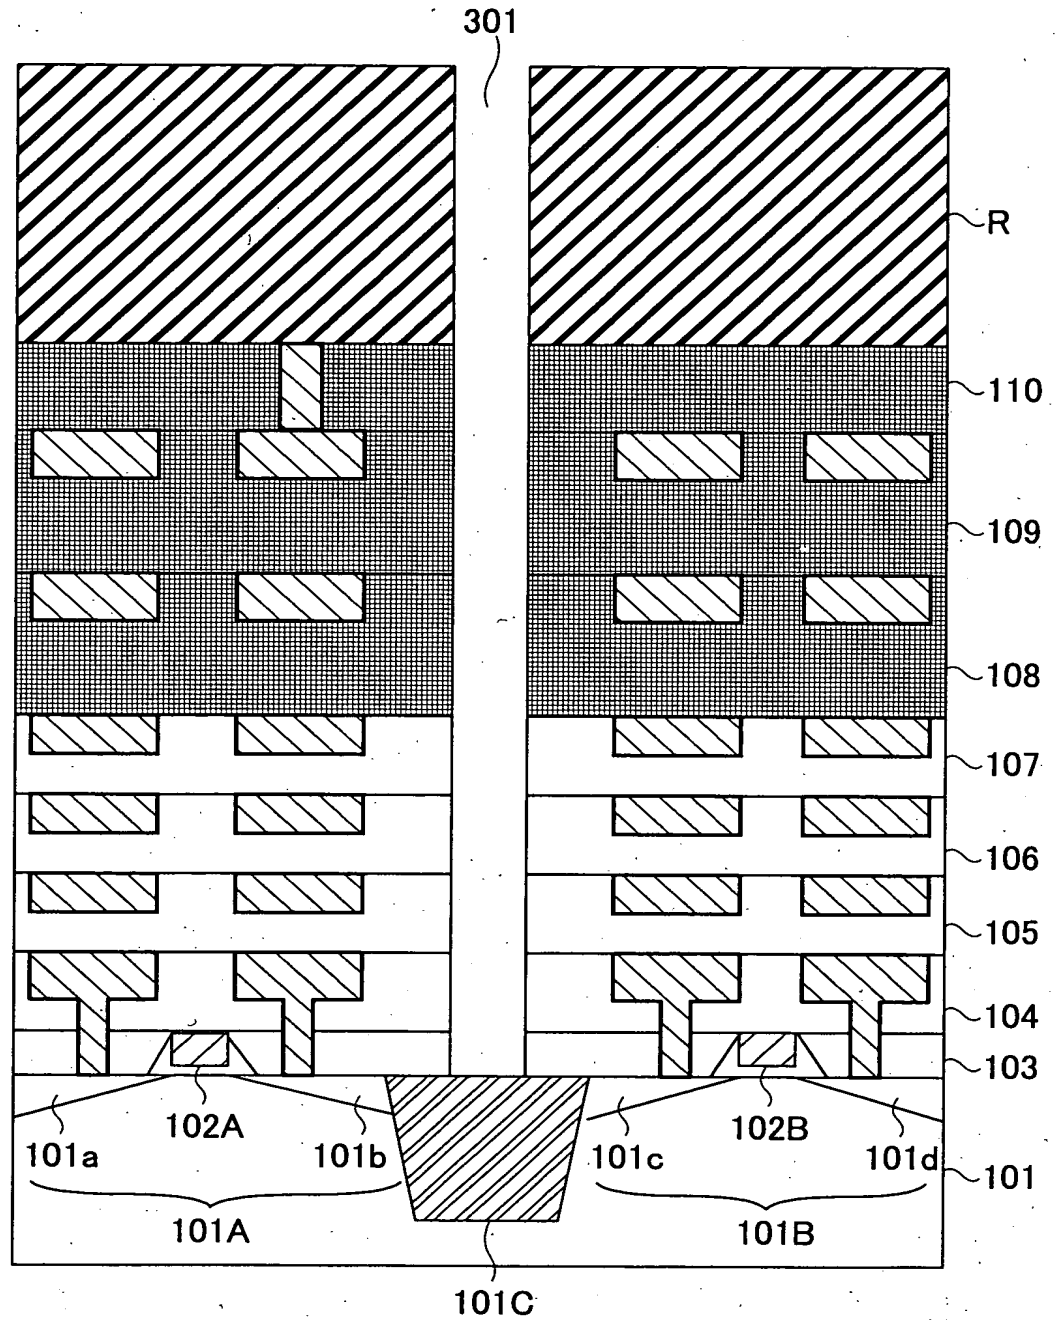


FIG.12

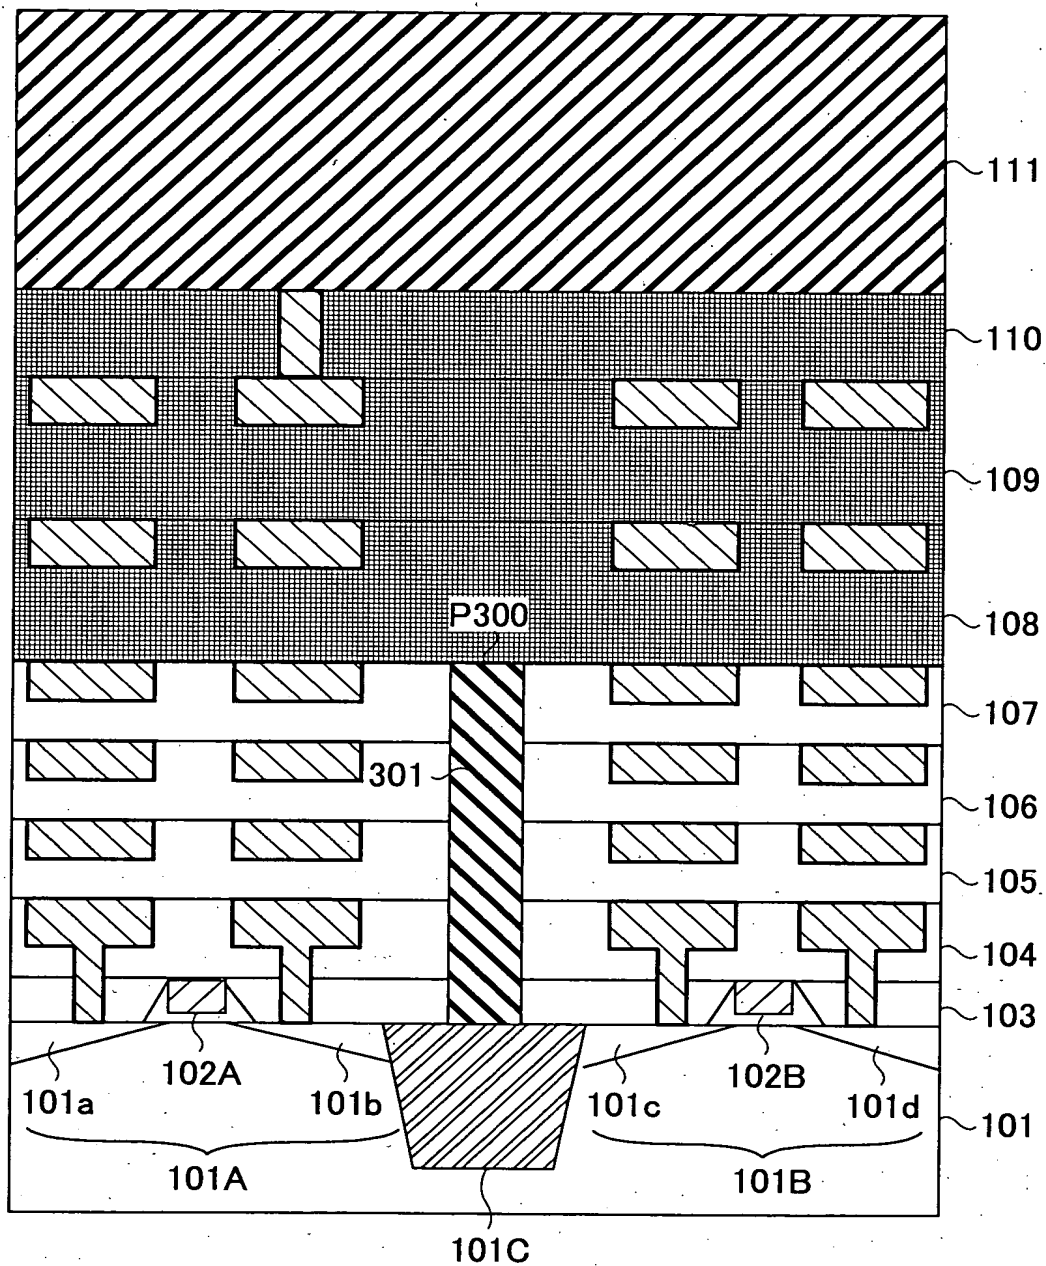


FIG.13A

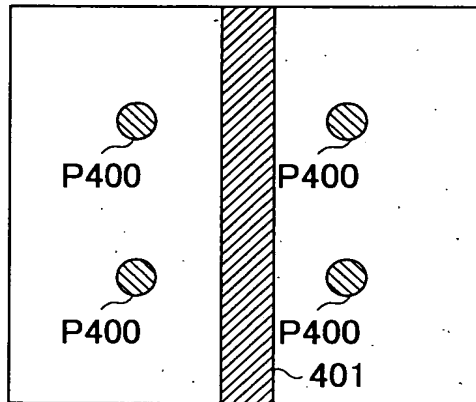


FIG.13B

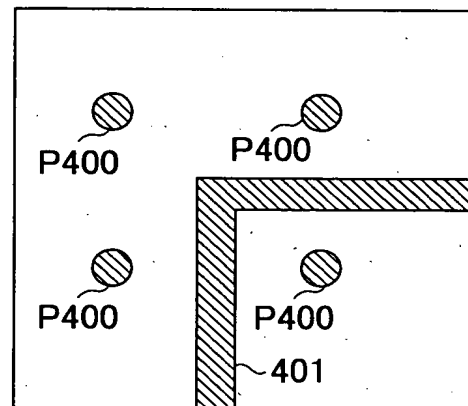


FIG.13C

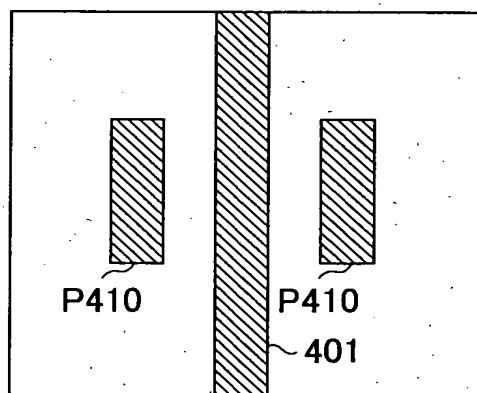


FIG.13D

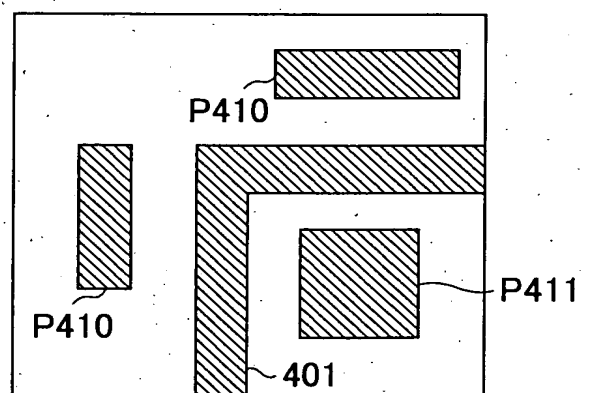


FIG. 14

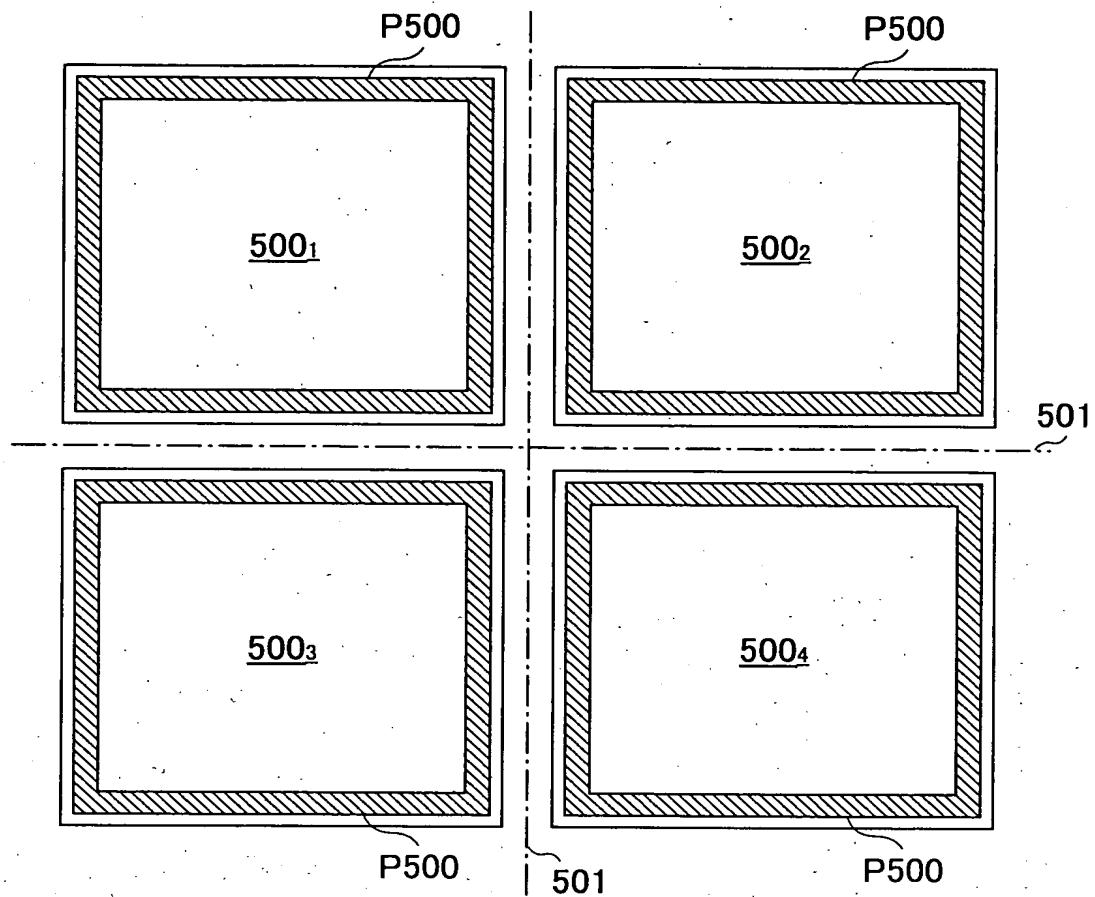


FIG.15

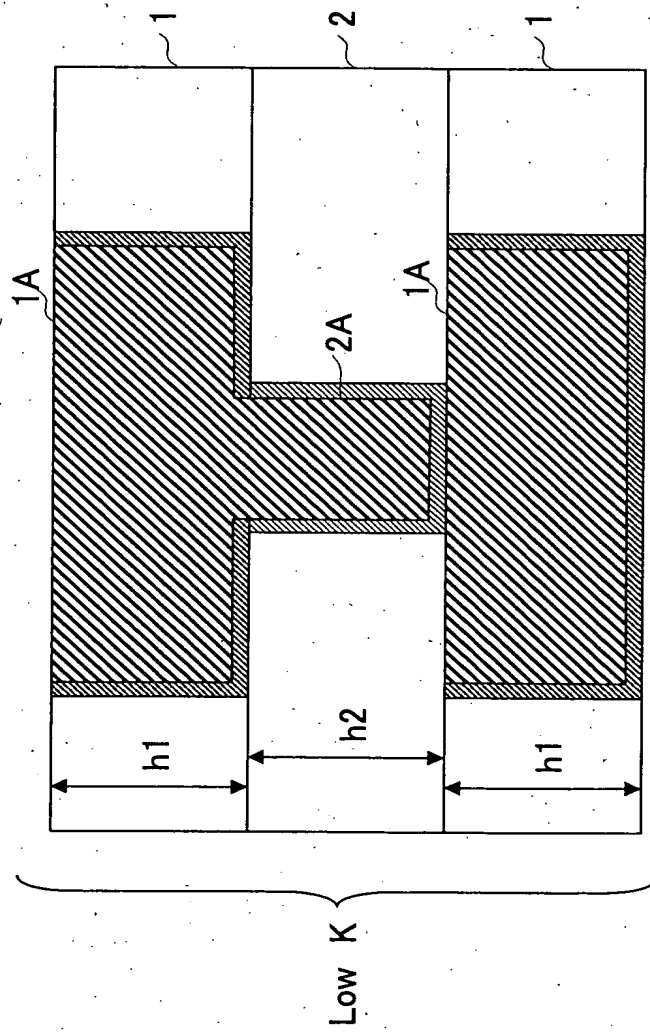


FIG.16

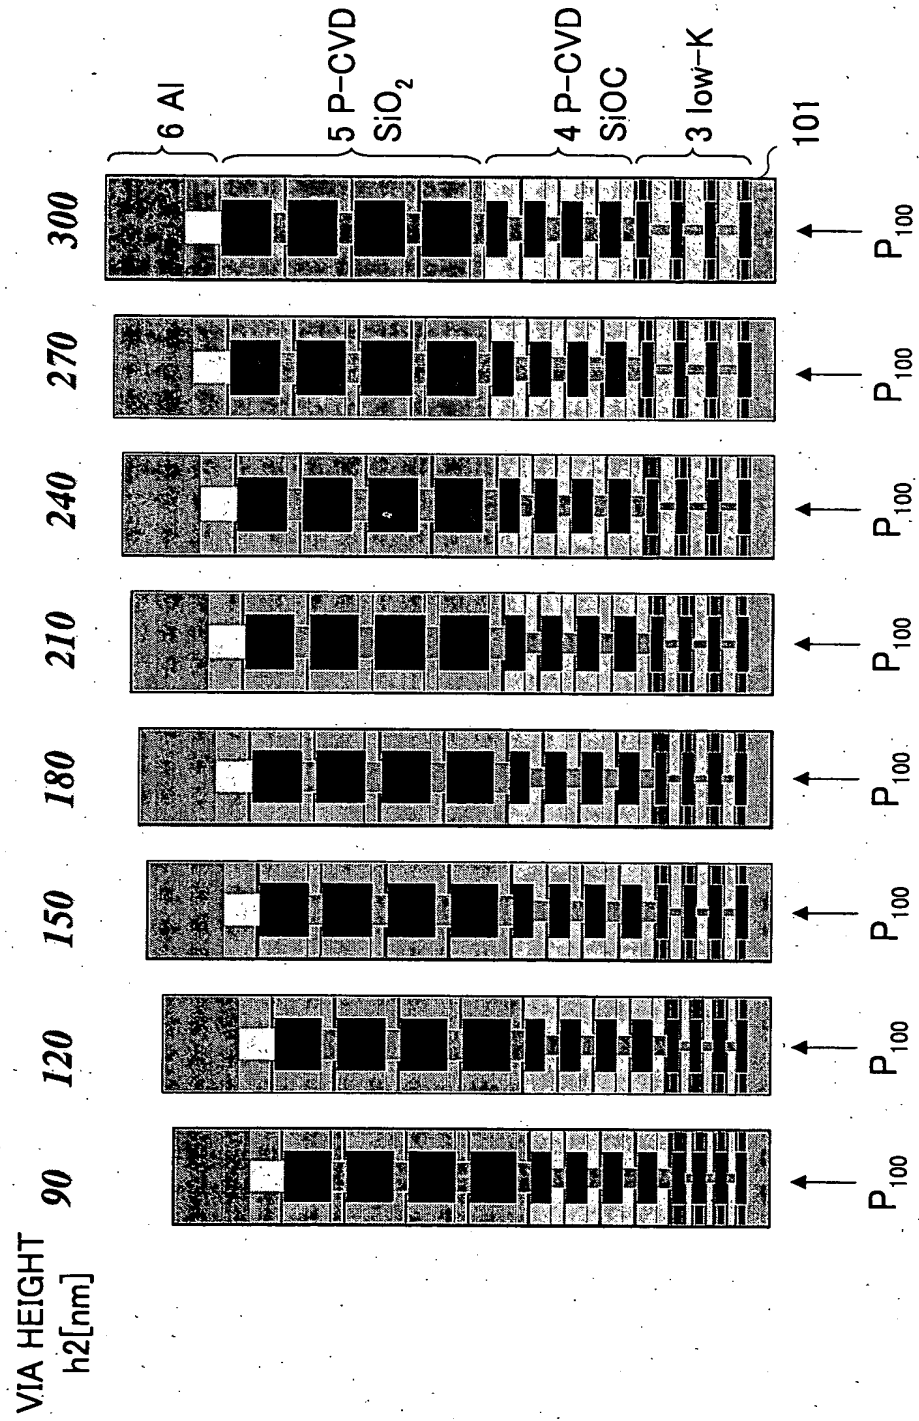
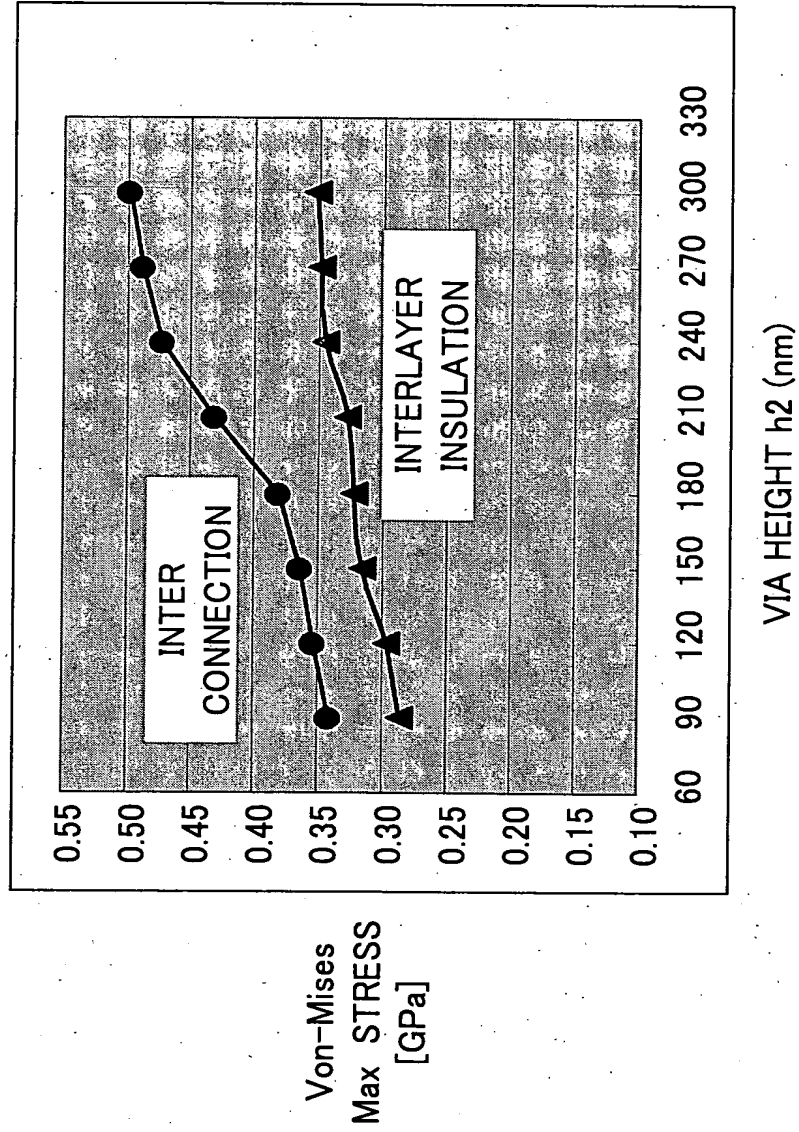




FIG.17



**FIG. 18**

600

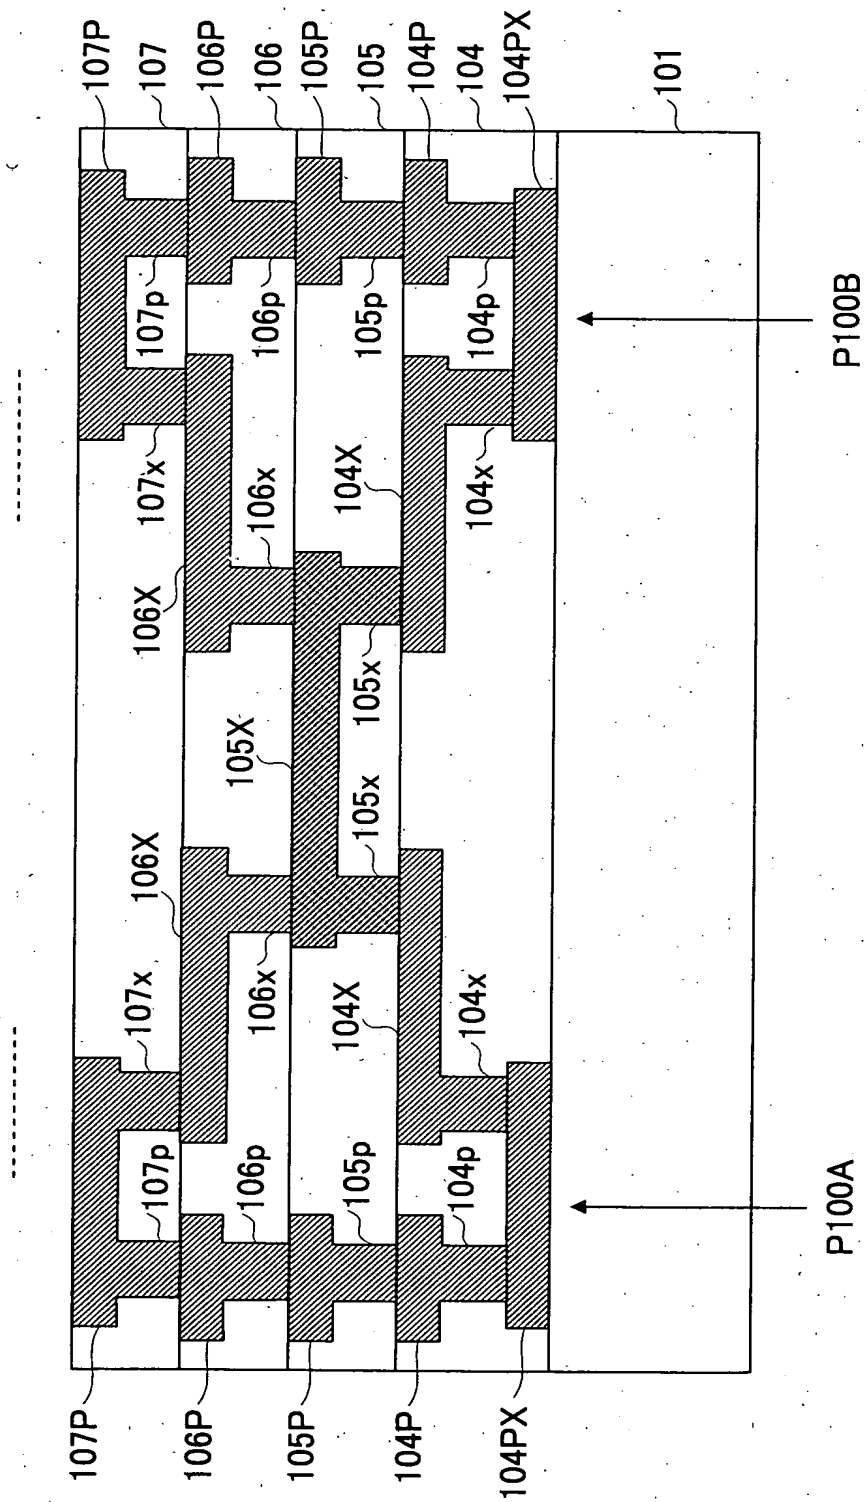


FIG. 19A

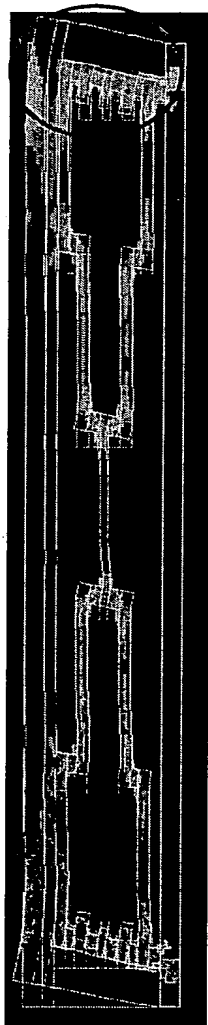


FIG. 19C

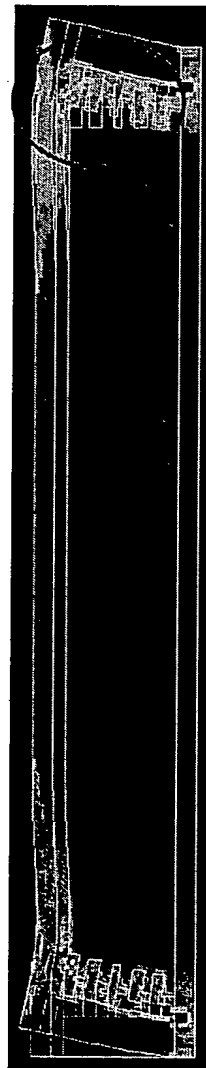
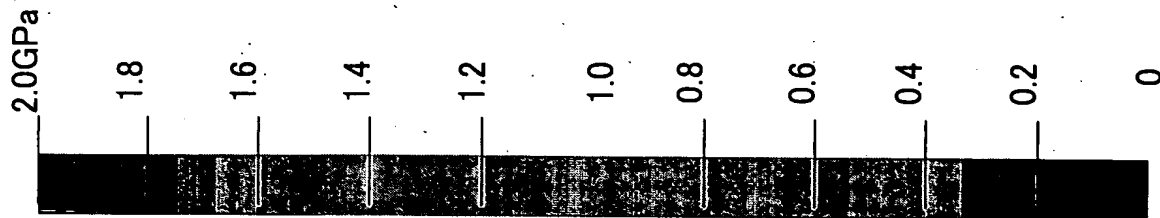


FIG. 19B



FIG. 19D



**FIG. 20.**

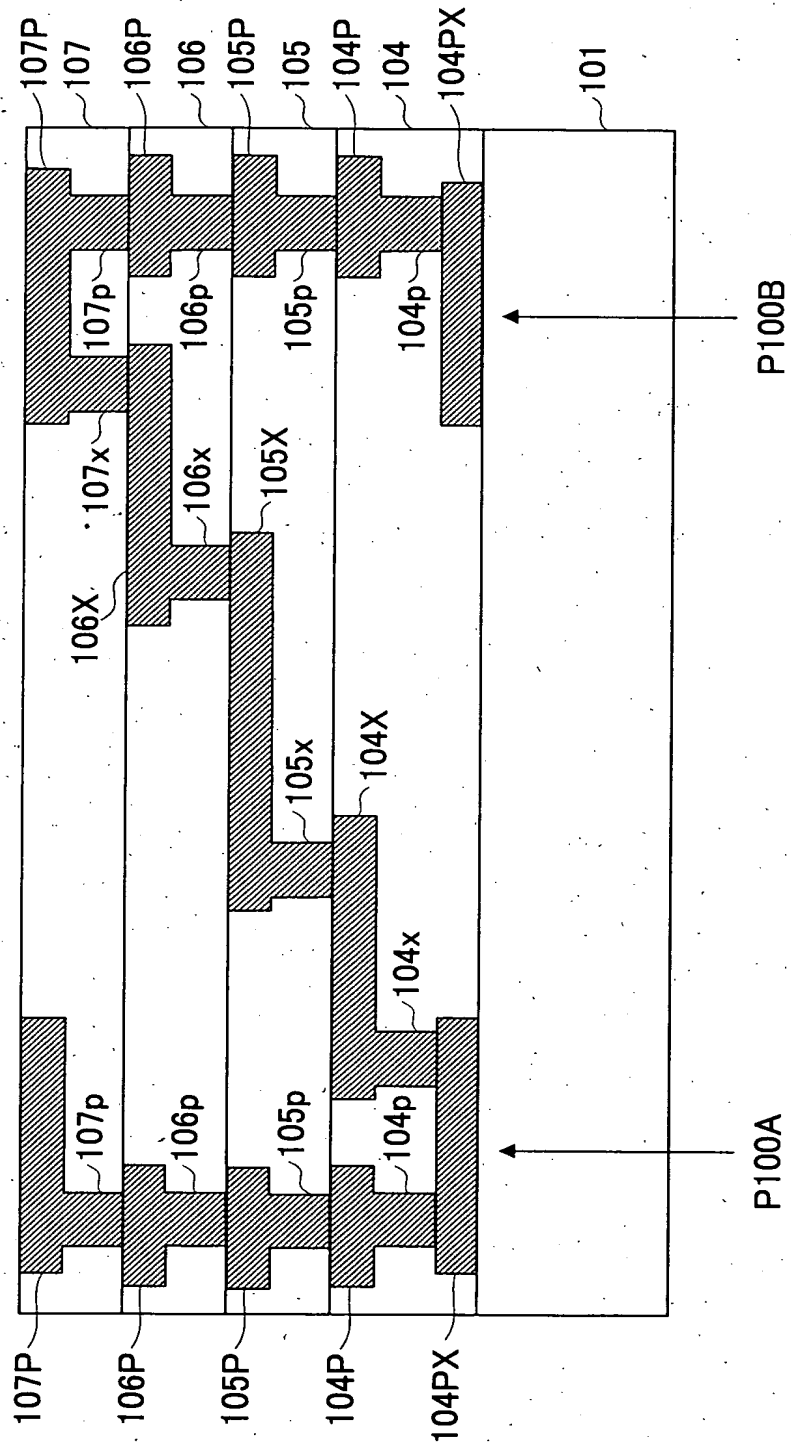


FIG.21

